

## Oyster Light for Ceiling Fan Models:

by Schneider Electric

**ACES36\*\***, **ACES36J\*\***, **ACES48\*\***,  
**ACES48J\*\***, **ACES56\*\***, **ACES56J\*\***,  
**4HS1200\*\***, **4HS1400\*\***.

# Light Kit Installation Instructions


### Oyster Light Kit

There are a large variety of lamp dimensions on the market. The following instructions are structured to ensure correct lamp orientation and minimise the potential for rattles and noises. The following job must be completed by a qualified electrician.

**Note:** Ensure power is OFF or DISCONNECTED when installing or replacing lamps.


#### STEP 1:

Unscrew the plastic nipple from the bottom of the motor housing. Pull out the light wires from the motor housing for connection with the light kit.

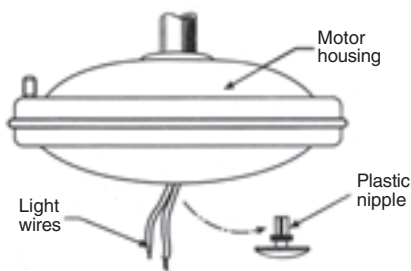


#### STEP 2:

Insert the two sleeveings provided through the light wires; one sleeving for each wire.

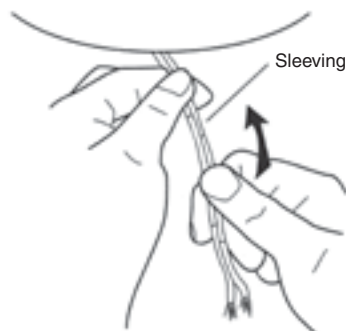


#### STEP 3:

Insert the light wires with sleeving through the adaptor and screw the adaptor into the motor shaft.

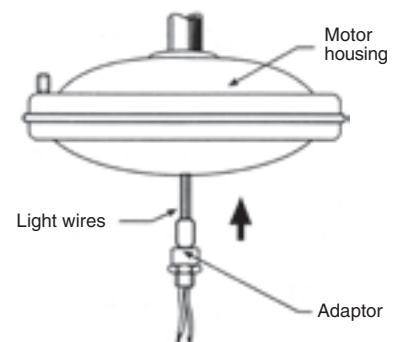


#### STEP 4:

Mount the lampholder bracket onto the light kit top cover by the two set screws, originally placed on the lampholder bracket.

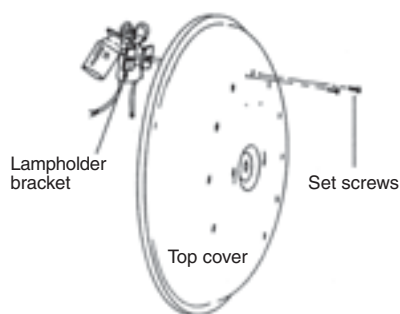


#### STEP 5:

Secure the light kit top cover and motor together by screwing the supporting bar, star washer and the hexagonal nut, securely onto the adaptor.

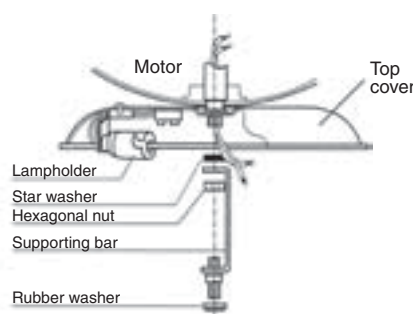

#### STEP 6:

Connect the light wires from the motor and the lampholder to each side of the terminal block on the top cover as shown.

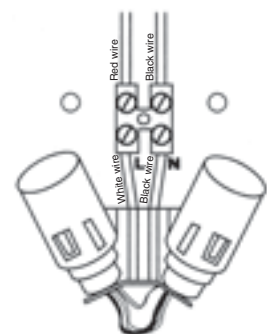


**STEP 7:**


Insert and secure the terminal shroud, then secure two light bulbs into the lampholders; compact fluorescent lamps (max 15W each), incandescent lamps (max 60W each) or halogen lamps (max 60W each).

**STEP 8:**


Grasp the lamps at their base and push toward the top cover until they touch it. Release the lamps and ensure they are not touching the top cover.

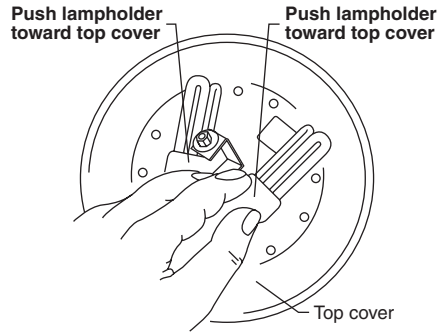**STEP 9:**


Grasp the lamps at their base and squeeze together towards the terminal shroud, until there is 5mm of clearance on each side, at the closest point. Maintain correct supporting bar orientation shown below.

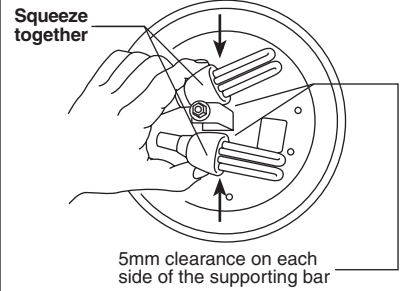**STEP 10:**

Assemble the glass cover onto the supporting bar with rubber washer and nut.

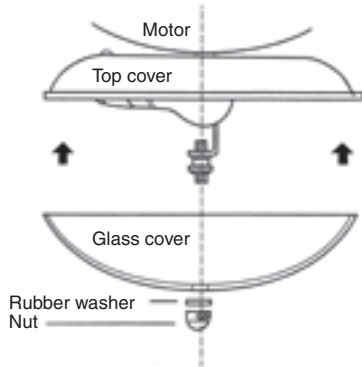

**Note:** If further interference occurs after following these instructions, observe the type of interference and modify the position of the lamps by grasping the lamp base to stop any interference that may occur. **Ensure power is OFF or DISCONNECTED when installing or replacing lamps.**

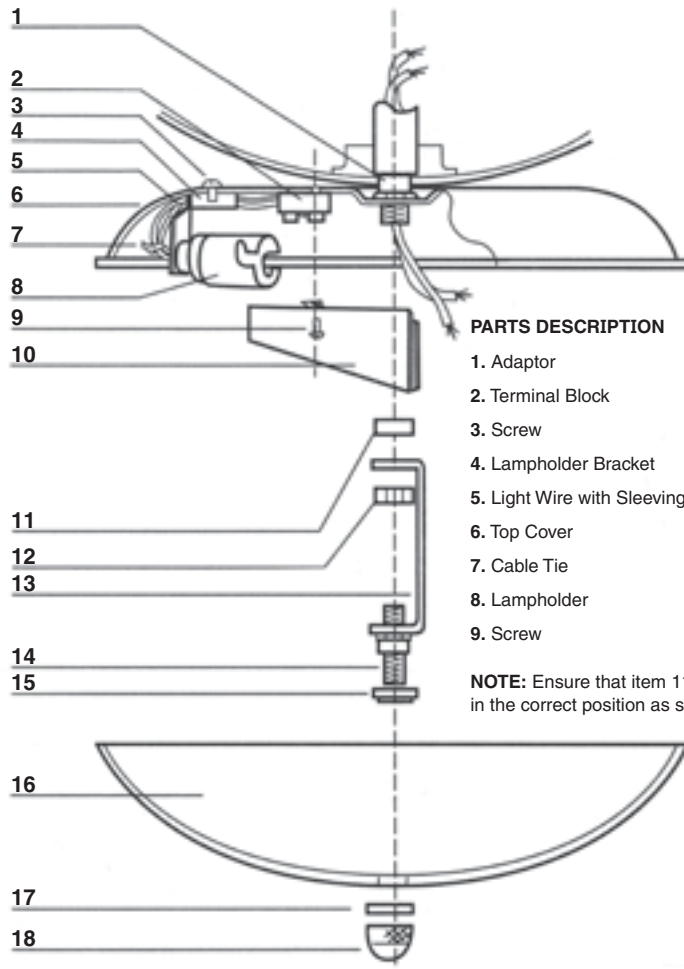**EXPLODED VIEW:****PARTS DESCRIPTION**

1. Adaptor	10. Terminal Shroud
2. Terminal Block	11. Star Washer
3. Screw	12. Hexagonal Nut
4. Lampholder Bracket	13. Supporting Bar
5. Light Wire with Sleeving	14. Adaptor
6. Top Cover	15. Rubber Washer
7. Cable Tie	16. Glass Cover
8. Lampholder	17. Rubber Washer
9. Screw	18. Nut

**NOTE:** Ensure that item 11 (Star Washer) is fitted in the correct position as shown.

**Clipsal Australia Pty Ltd**

A member of Schneider Electric

Contact us: [clipsal.com/feedback](http://clipsal.com/feedback)

National Customer Care Enquiries:

**Tel 1300 2025 25 Fax 1300 2025 56**

**clipsal.com**

Clipsal Australia Pty Ltd reserves the right to change specifications, modify designs and discontinue items without incurring obligation and whilst every effort is made to ensure that descriptions, specifications and other information in this catalogue are correct, no warranty is given in respect thereof and the company shall not be liable for any error therein.

© Clipsal Australia Pty Ltd. The identified trademarks and copyrights are the property of Clipsal Australia Pty Ltd unless otherwise noted.